

SEKONIC

***OPTICAL
MARK READER***

**For 64bit Windows VISTA/7
USB Device Driver
Installation manual**

Contents

1 Operation Environment 3

2 Components 3

3 Midification points for this driver 3

4 Installing 4

5 Un-installing 9

1 Operation Environment

- (1)Acceptable model :SR-3500/6000/6500, SR-1800
- (2)API Library :Ver5.0.0.0 (Diagnostic Utility Ver 4.1.0.1)
- (3)OS(*1) (*2) :Microsoft Windows Vista 64bit
Microsoft Windows 7 64bit
- (4)Performance of Display :640×480 or More
- (5)Interface :USB 2.0 / USB1.1
- (6)Language :English / Japanese

(*1) :SEKONIC confirmed operation of above OS. However when Microsoft finish the support of above OS we finished support too.

(*2) :This USB Driver and installer are not support as Windows2000 / Windows XP.

Microsoft, Windows are registered trade mark of Microsoft Corporation in the U.S.A and other countries.

2 Components

- "SR3500DriverInstaller4.0.exe" Installer of USB Device driver

3 Modified Points from previous driver


- New version number
- USB Device driver **Ver.4.0.0.0*** **(Previous Version is 3.0.0.0)**
 - (1) New USB device driver accepts operation in the 64bit OS
 - (2) Modified New USB driver installer

(*) This USB driver accepts to work on Ver 5.0.0.0 API library.
This USB driver can not work under the Ver 4.1.0.0 API library or previous.


4 USB Driver (for SR-1800/SR-3500/SR-6500) Installation for Windows Vista /

7

1. Do not connect USB cable to Computer (hereafter "PC") when Installation
2. Click the "SR3500DriverInstaller4.0"
※: It has possibility of display on "SR3500DriverInstaller4.0.exe" from setting in the PC.

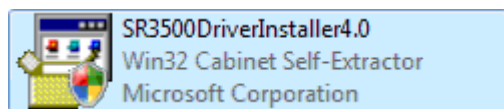


Windows Vista

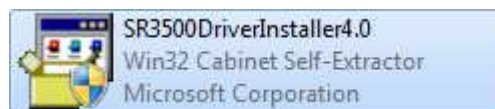


Windows 7

- In case of display on User account control in Windows Vista or 7, please select "Yes" or "Apply".

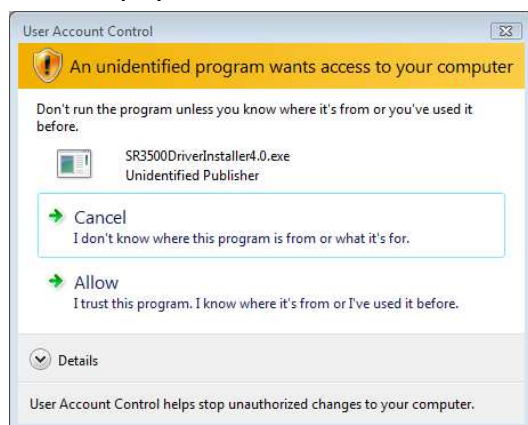


Windows Vista

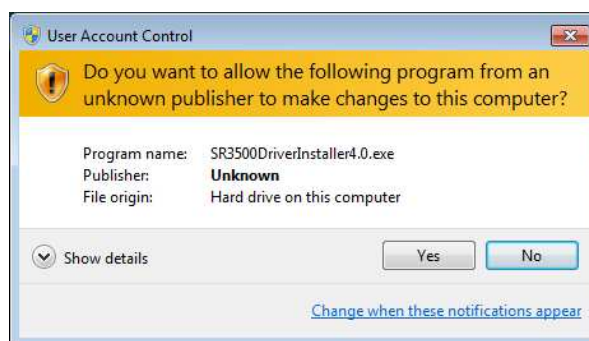


Windows 7


3. When the installer executes, follow the picture display on the PC.
When you click the "Next", the install process will start.

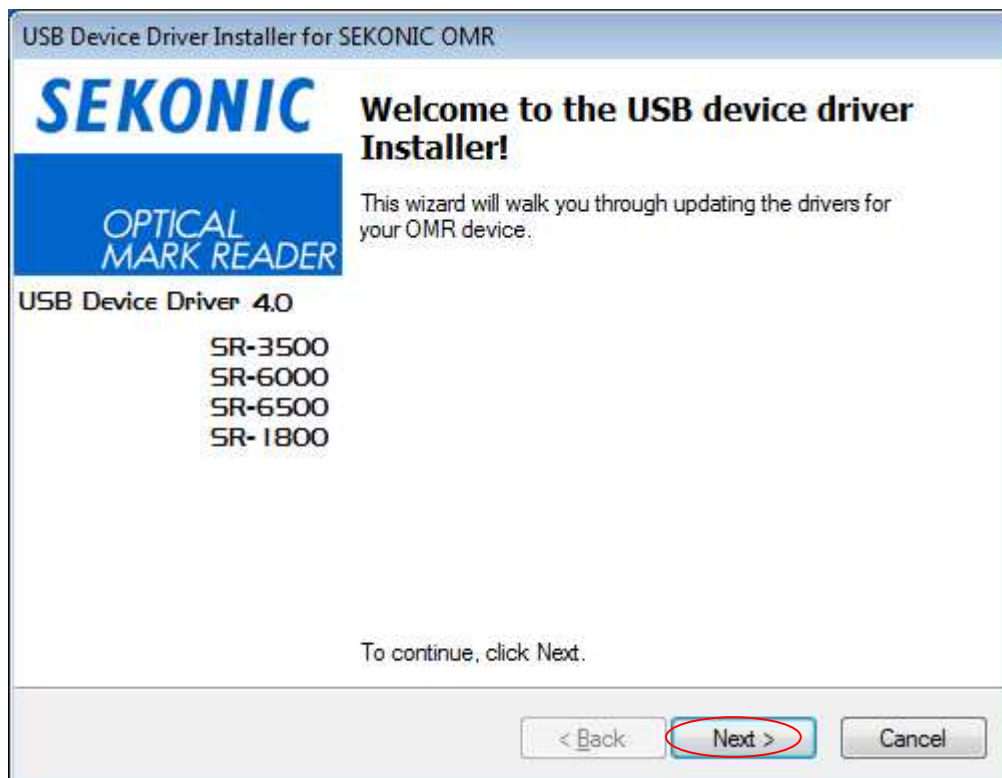


4. Confirm description of End User License Agreement. When you apply terms of agreement please click check box of "I accept this "EULA" in the display.
※: In case of selected "I do not accept this " EULA", you can not install this USB driver.

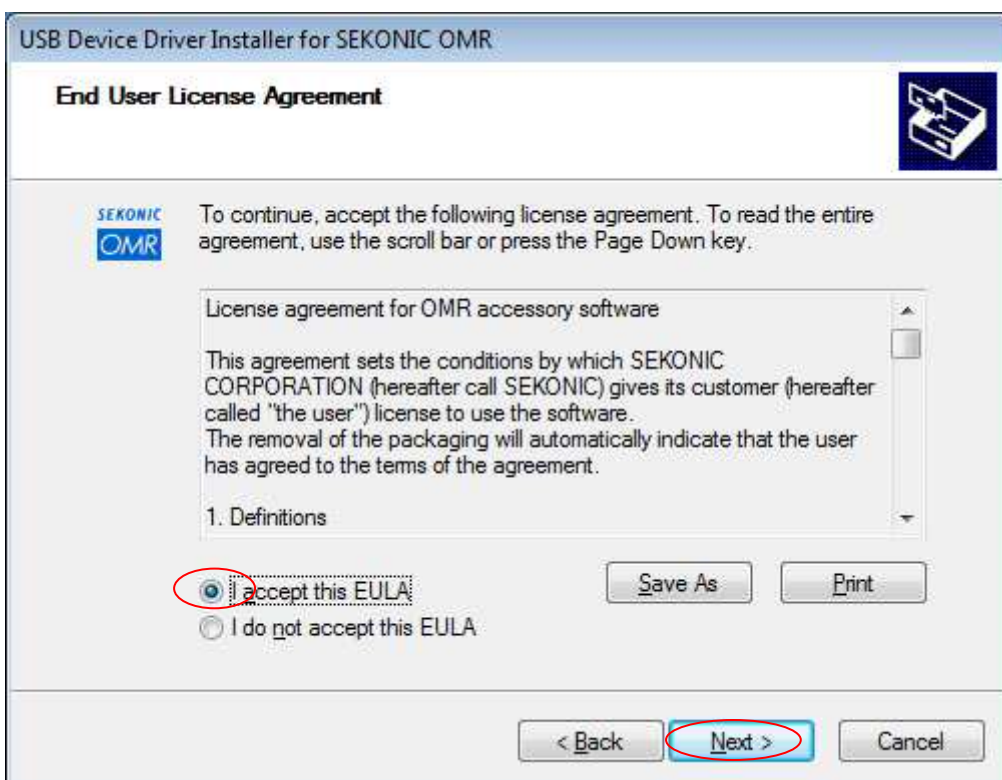

- In case of displayed Windows security, select “Install this driver software” or “Install”.

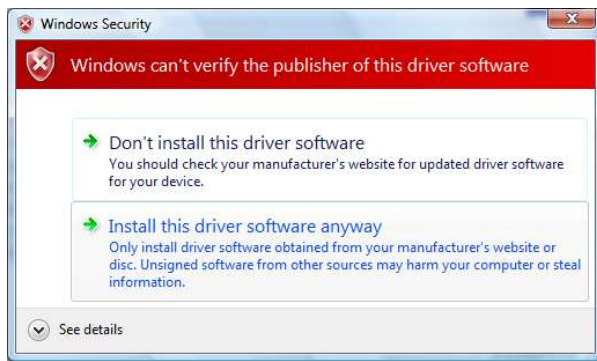


Windows Vista

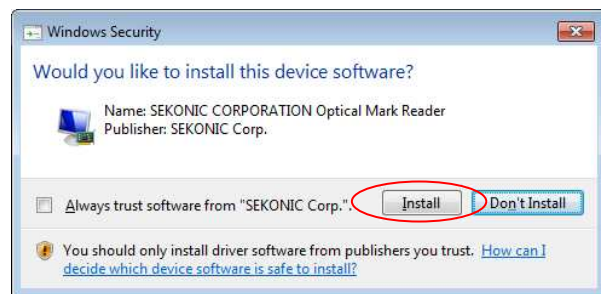


Windows 7


5. Start the installation of the USB driver. When completed installation display will be changed with automatically. Do not operate other software while the installation of USB driver.

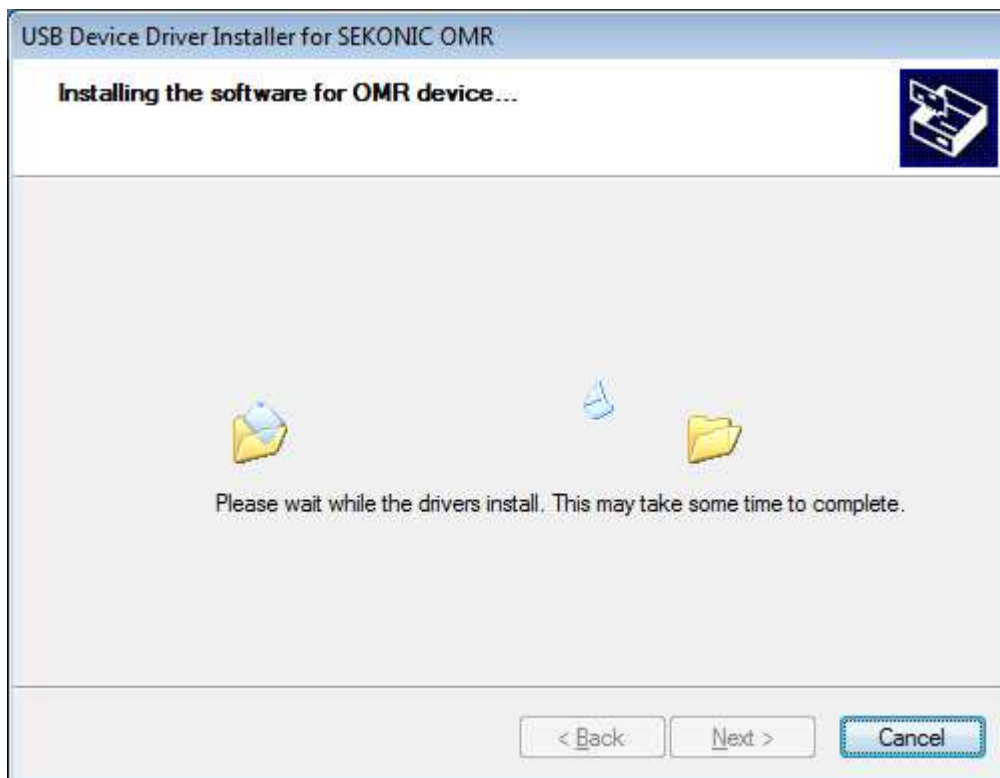

6. When you finished installation of USB driver following picture display on the PC.
And please click finish in the display.

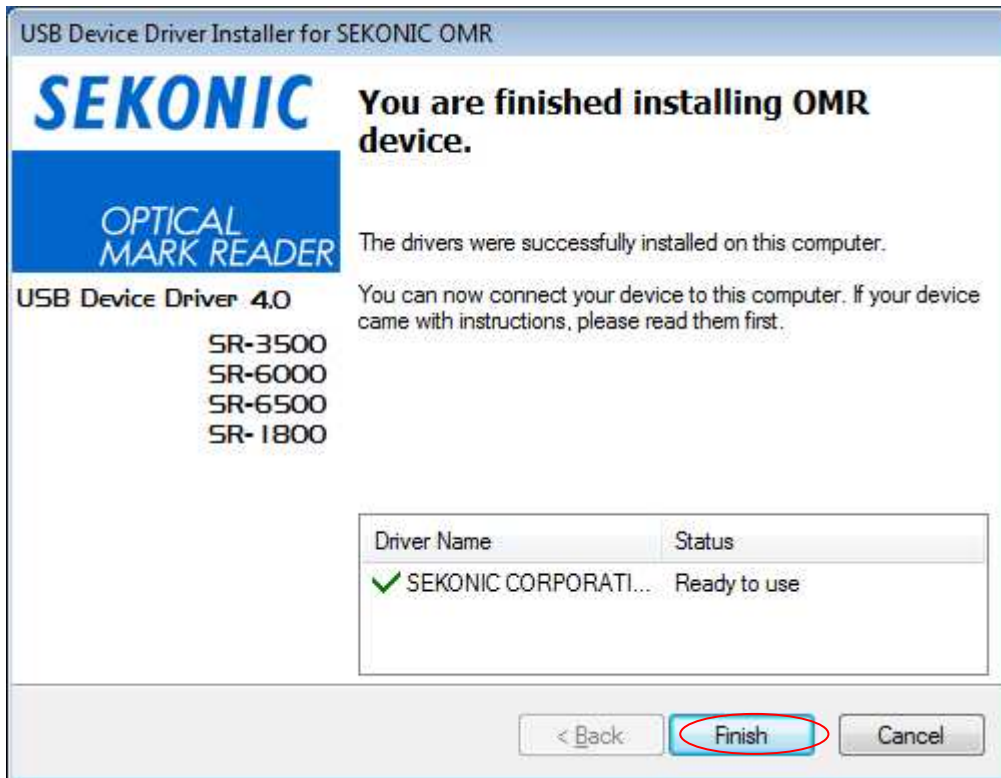

- If you hope to stop the Installation of USB driver please click Cancel switch.
The PC will display picture then please click "Yes" the installation will stop.

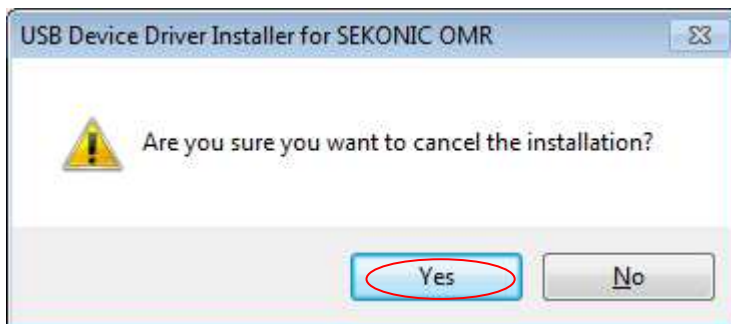

7. Connect OMR to the PC . Using USB cable

8. Turn on OMR. USB driver will automatically install in the PC. (While the installation following picture will display on in the right side bottom in the display)



(Windows 7)

9. When you confirm following description. Installation is finished



(Windows 7)


- When the installation is completed you can see the following switch (Eject Optical Mark Reader) in the task tray. If you click "Eject Optical Mark Reader" the communication between OMR and PC will be finished. If you hope to re start of OMR operation, please turn on OMR again or put off and on USB cable between OMR and PC.




(Windows 7)

5 Uninstalling

1. Confirm NOT connect OMR with Computer when Uninstalling
2. Click "Uninstall" of the program from control panel in the Windows.
3. Select following Driver Package (SEKONIC CORPORATION (WinUSB) Optical Mark Reader), and click "uninstall or Change a program" .

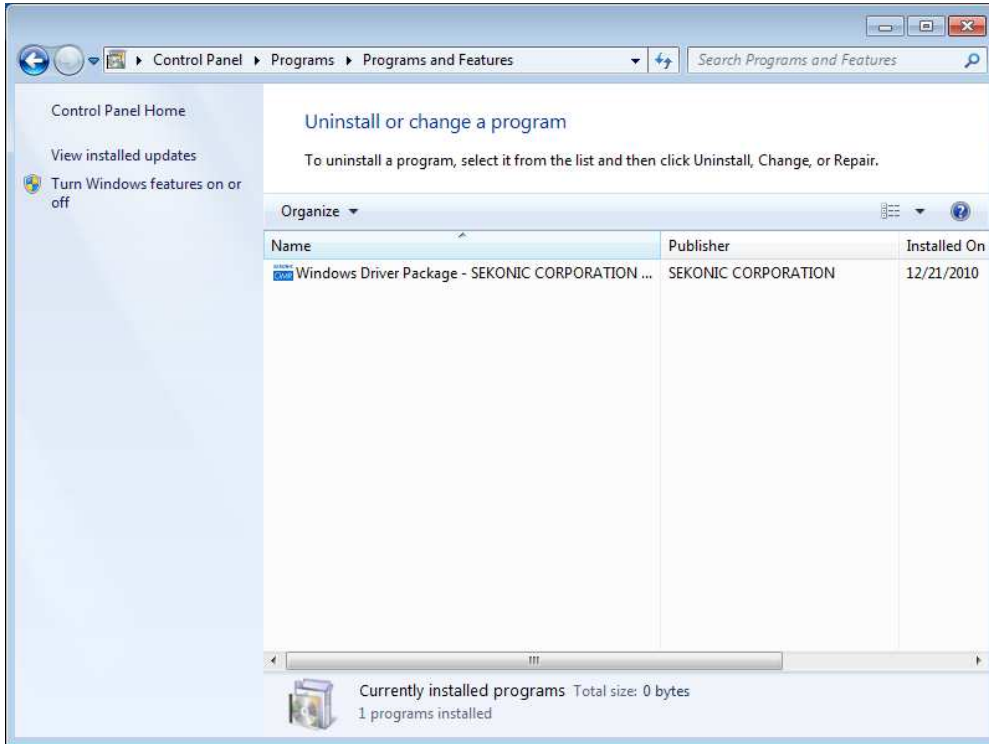

4. The following picture display on in the PC. When you click "Yes" start the uninstall process.

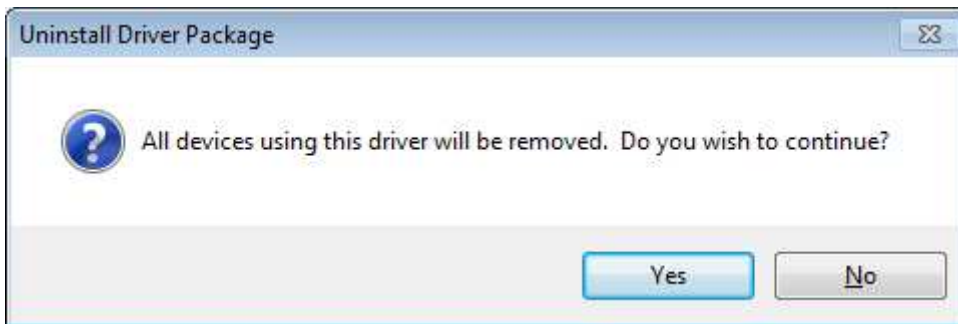

OPTICAL MARK READER

SR-3500/6000/6500/1800

Installation manual USB device driver for 64 bit

© 2010 SEKONIC CORPORATION

7-24-14, Oizumigakuen-Cho, Nerima-Ku, Tokyo 178-8686, Japan

TEL+81-3-3978-2375 FAX +81-3-3922-2144

[h:tp://www.sekonic.co.jp](http://www.sekonic.co.jp)

<http://www.sekonicusa.com>

● This specification subject to change without Notice